

WIGI

Wiegand access control device



USER MANUAL

Contents

1	FOR YOUR SAFETY	3
2	INTRODUCTION.....	4
3	WIGI FEATURES AND APPLICATIONS.....	5
4	START UP.....	6
5	LED INDICATION.....	7
6	CONNECTION DIAGRAM	8
7	WIGI UNIT MANAGEMENT	9
8	WIGI FUNCTIONS WITH PROGRAMMING INSTRUCTIONS	10
8.1	WEB SERVER - LOG IN.....	10
8.2	WEB SERVER – ADDING UNITS TO USER PROFILE.....	11
8.3	WEB SERVER-UNIT MANAGEMENT	13
8.4	PIN ACCESS	14
8.5	CALLER ID ACCESS	16
8.6	OUTPUTS SETTINGS	17
8.7	TIMER-TIMED CONTROLLED OUTPUT	18
8.8	ADMINISTRATION	20
8.9	EVENT LOGING	22
8.10	MISCELLANEOUS	23
9	WIEGAND INTERFACE DATA FORMATS	24
9.1	WIEGAND 26 BIT, DIFFERENT DATA FORMATS	24
9.2	WIEGAND 30 BIT, DIFFERENT DATA FORMATS	25
10	CONTACTS	26

Figures

Figure 1: WIGI: Connection diagram	8
Figure 2: WEB Server-Sign In page	10
Figure 3: WEB Server-Main page select ADD mode	11
Figure 4: WEB Server-Main page adding WIGI units	12
Figure 5: WEB Server-Unit management window	13
Figure 6: WEB Server- PIN Access configuration	14
Figure 7: WEB Server-Caller ID Access	16
Figure 8: WEB Server-Output setting.....	17
Figure 9: WEB Server-Timer setting →Day mode.	18
Figure 10: WEB Server-Timer setting →Week mode.....	18
Figure 11: WEB Server-Notification numbers	20
Figure 12: WEB Server-Input alarm configuration	20
Figure 13: WEB Server-Log event	22
Figure 14: WEB Server-Misc	23

Tables

Table 1: WEB Server-PIN entry parameters.....	15
Table 2: WEB Server-Timer setting, output mode options	19
Table 3: Wiegand 26: Mode 0.....	24
Table 4: Wiegand 26: Mode 1.....	24
Table 5: Wiegand 26: Mode 2.....	24
Table 6: Wiegand 26: Mode 3.....	24
Table 7: Wiegand 30: Mode 0.....	25
Table 8: Wiegand 30: Mode 1.....	25
Table 9: Wiegand 30: Mode 2.....	25
Table 10: Wiegand 30: Mode 3.....	25

1 FOR YOUR SAFETY

SWITCH ON SAFELY

Do not switch the unit on when use of wireless phone is prohibited or when it may cause interference or danger.

INTERFERENCE

All wireless phones and units may be susceptible to interference, which could affect performance.

SWITCH OFF IN HOSPITALS

Follow any restrictions. Switch the unit off near medical equipment.

SWITCH OFF IN AIRCRAFT

Follow any restrictions. Wireless devices can cause interference in aircraft.

SWITCH OFF WHEN REFUELING

Do not use the unit at a refueling point. Do not use near fuel or chemicals.

SWITCH OFF NEAR BLASTING

Follow any restrictions. Do not use the unit where blasting is in progress.

USE SENSIBLY

Use only in the normal position as explained in the product documentation. Do not touch the antenna unnecessarily.

2 INTRODUCTION

WIGI is a simple GSM/LTE switch system designed to ensure low-cost, simple to install/use, reliable and single box solution for remote managed switching application. It is designed for unlimited range, pin code access, caller ID control and Wiegand access support.

Optional WIGI supports alarm detection, stay-alive messages, credit detection etc...

3 WIGI FEATURES AND APPLICATIONS

Features:

- ⇒ Built-in LTE module with Multi-band LTE, UMTS/HSPA+ and GSM/GPRS/EDGE coverage
- ⇒ Caller ID numbers control (up-to 500 CALLER ID numbers)
- ⇒ Up to 1000 PIN access codes
- ⇒ Input Wiegand receiver
- ⇒ 1 output (relay supported)

- ⇒ Programming by WEB server

Applications:

- ⇒ Remote gate opener – Caller ID number recognition
- ⇒ Simple (Wiegand) access system

4 START UP

WIGI unit accepts a standard GSM SIM cards from any network.

**VERY
IMPORTANT**

USE A MICRO SIM CARD



WARNING

DO NOT Insert or remove the SIM card while the unit is powered ON!!

IMPORTANT

Before inserting SIM card to unit make sure the PIN code is removed!!

- ⇒ Insert SIM card in WIGI unit.
- ⇒ Connect power cable to WIGI unit. Use power supply 12-24V AC or 15-24V DC!
- ⇒ Power up the unit.
- ⇒ Wait until LED1 (Green) starts flashing. This is set in around 30 – 45 seconds.
- ⇒ WIGI unit is now ready to operate.

5 LED INDICATION

Green LED (LED1)

- Indicates the level of the GSM signal from 1 to 5 LED flashes (1 is weak signal, 5 is excellent signal)

Yellow LED (LED3)

- Short flashing indicates that the GSM module is ON, but it is not yet connected on the GSM network. After connection, yellow led is flashing with short pulse (0,5s) ON and a long pulse OFF(5s).

6 CONNECTION DIAGRAM

Before connection the WIGI please take a look at connection diagram.

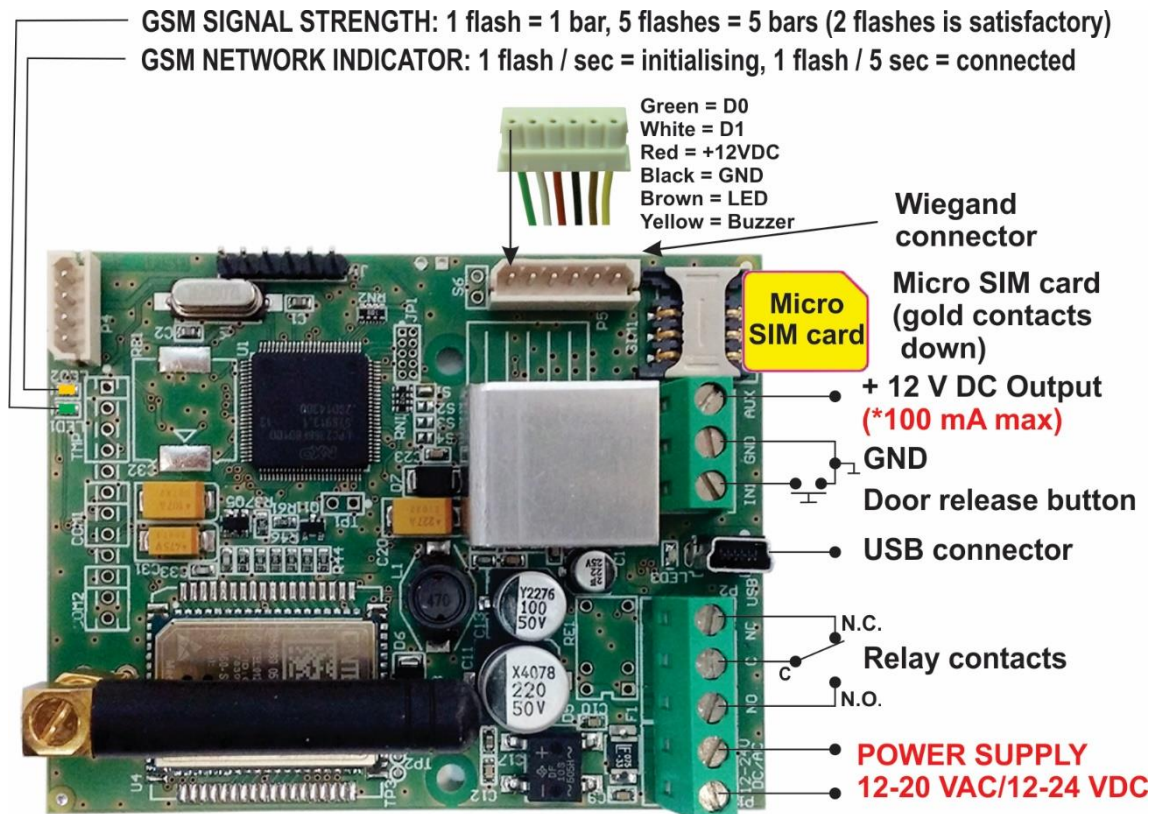


Figure 1: WIGI: Connection diagram

IMPORTANT

DO NOT USE Power out (12V AUX) for electric lock driving! Use separate power source for door electric lock!

7 WIGI UNIT MANAGEMENT

Unit supports different types of management (programming):

- ⇒ Unit can be programmed remotely by using WEB server access.
- ⇒ Unit can be programmed remotely by SMS commands (Optional).

8 WIGI FUNCTIONS WITH PROGRAMMING INSTRUCTIONS

As mentioned in previous chapters WIGI unit can be programmed in various way, this document will focus on most common programming way: WEB programming.

IMPORTANT

SIM card in the WIGI unit **MUST have DATA PLAN** to be able to use WEB programming!

8.1 WEB SERVER - LOG IN

The web server can be find under the address: <https://www.easynet.eu/>.

Log in

Sign Up Back to site

Please sign in with one of your existing accounts, or [create a new account](#) on EasySet and sign in below:

f g
or

Login: user1

Password:

remember me:

Forgot your password? Log in

When using this site, you agree to our [terms of service](#)

Figure 2: WEB Server-Sign In page

User must first use the Sign IN section to create working profile on the server. The profile can be created by using social login like Facebook, Google account or Twitter. The user lacks any of the social profile it can proceed to Sign UP page use standard user name and password entry.

NOTE

Server supports Firefox, Google Chrome, Safari.

8.2 WEB SERVER – ADDING UNITS TO USER PROFILE

After login the user will be diverted to WEB server main window. This page is used to add/remove/search for WIGI units from the user's profile.

Select “+” sign to select ADD WIGI units to user's profile.


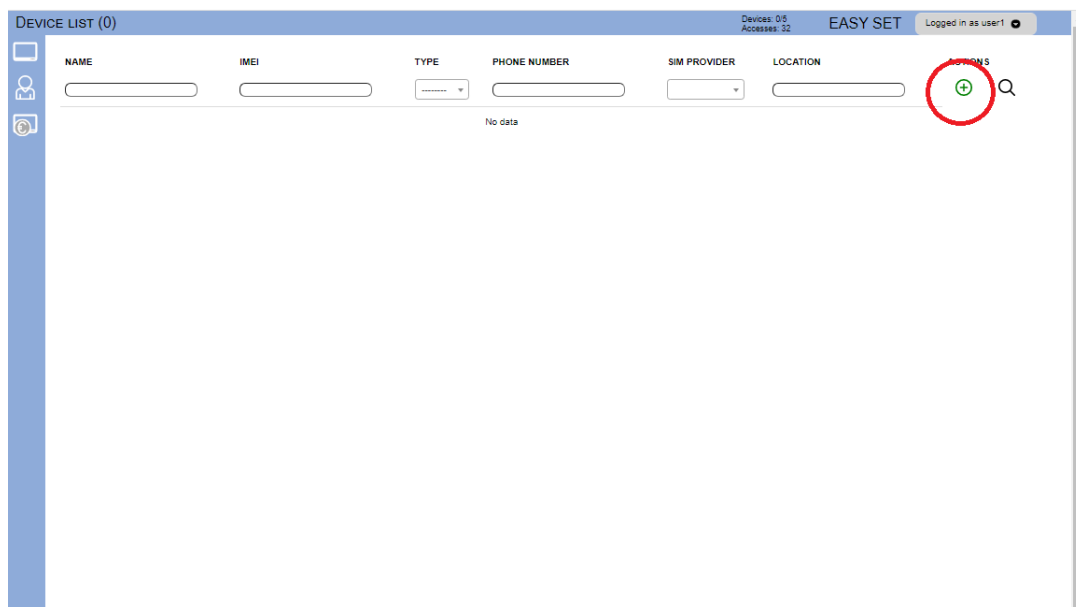


Figure 3: WEB Server-Main page select ADD mode

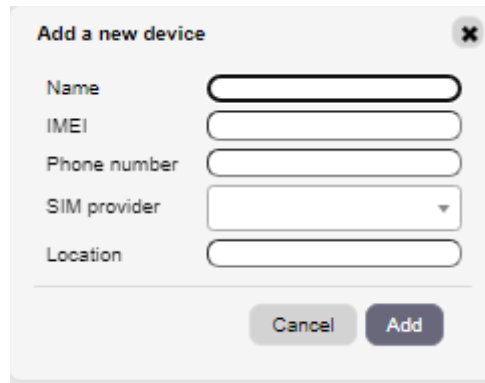

The screenshot shows a modal window titled "Add a new device" with a close button (X) in the top right corner. The form contains the following fields:

- Name: A text input field.
- IMEI: A text input field.
- Phone number: A text input field.
- SIM provider: A dropdown menu.
- Location: A text input field.

At the bottom of the form, there are two buttons: "Cancel" and "Add".

Figure 4: WEB Server-Main page adding WIGI units

User than provides required data:

- **Name:** Name for the added unit - mandatory information.
- **IMEI:** Identification number of the unit, can be found in the enclosure of the unit - mandatory information. The IMEI is located on the cellular chip and also should be on the card board box of the WIGI.
- **Phone Number:** The telephone number of the SIM card in the WIGI unit - mandatory data.
- **SIM provider:** Information needed to enable data connection between the server and the unit. Selectable from the drop-down menu - mandatory data.
- **Location:** Notification field, used by the user to provide extra data for its own information - optional data.

By clicking the “+” (insert sign) after filling mandatory data, the unit will be added to the user profile.

First building of the unit data-base may take a few minutes.

8.3 WEB SERVER-UNIT MANAGEMENT

After the WIGI unit is added to user database, the user can change the configuration of the specific unit.

All changes made by the user are listed in the **Change Log** window. By clicking **Send to device** button ALL changes are send to the unit.

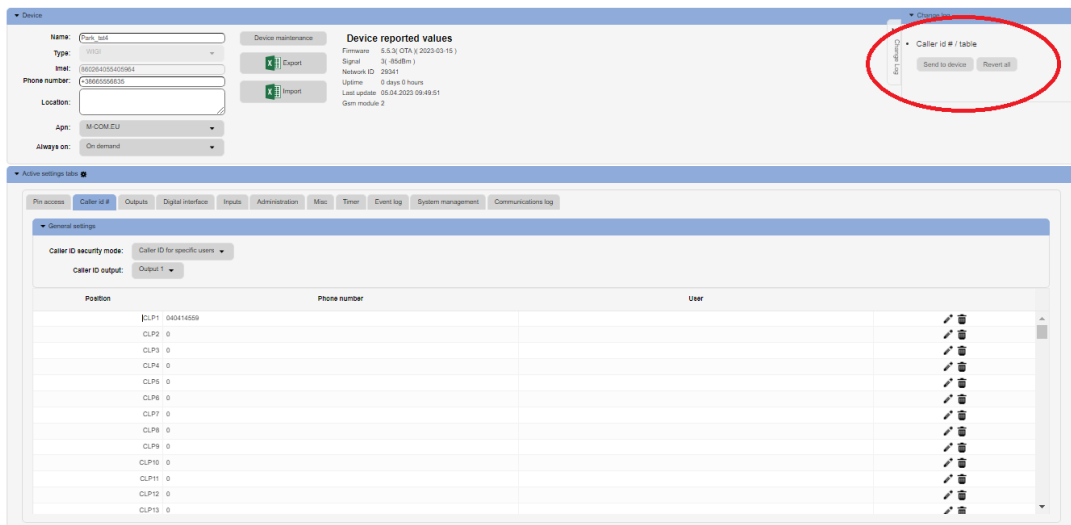



Figure 5: WEB Server-Unit management window

8.4 PIN ACCESS

External Wiegand device is used for access by entering PIN codes.

WEB server supports simplified and advance view/configuration of the PIN code. In simplified view only basic configuration of PIN code is possible.

PIN code configuration options

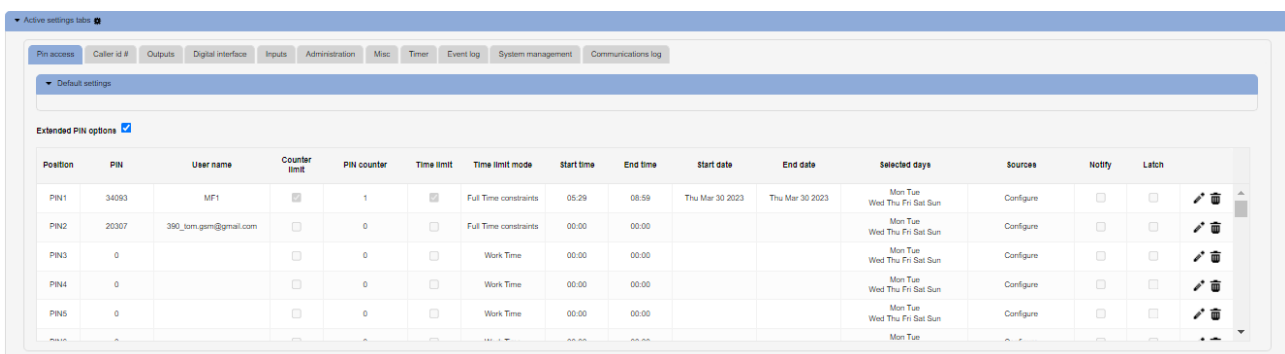

Position	PIN	User name	Counter limit	PIN counter	Time limit	Time limit mode	Start time	End time	Start date	End date	Selected days	Source	Notify	Latch
PN1	34053	MF1	<input checked="" type="checkbox"/>	1	<input checked="" type="checkbox"/>	Full Time constraints	05:29	08:59	Thu Mar 30 2023	Thu Mar 30 2023	Mon Tue Wed Thu Fri Sat Sun	Configure	<input type="checkbox"/>	<input type="checkbox"/>
PN2	20307	390_tom.gsm@gmail.com	<input type="checkbox"/>	0	<input type="checkbox"/>	Full Time constraints	00:00	00:00			Mon Tue Wed Thu Fri Sat Sun	Configure	<input type="checkbox"/>	<input type="checkbox"/>
PN3	0		<input type="checkbox"/>	0	<input type="checkbox"/>	Work Time	00:00	00:00			Mon Tue Wed Thu Fri Sat Sun	Configure	<input type="checkbox"/>	<input type="checkbox"/>
PN4	0		<input type="checkbox"/>	0	<input type="checkbox"/>	Work Time	00:00	00:00			Mon Tue Wed Thu Fri Sat Sun	Configure	<input type="checkbox"/>	<input type="checkbox"/>
PN5	0		<input type="checkbox"/>	0	<input type="checkbox"/>	Work Time	00:00	00:00			Mon Tue Wed Thu Fri Sat Sun	Configure	<input type="checkbox"/>	<input type="checkbox"/>

Figure 6: WEB Server- PIN Access configuration

Configuration options	Description
PIN	PIN code value
User name	Name of the user
Counter limit	Enable/Disable counter limitation (consecutive use)
Pin counter	Counter limit value
Timer limit	Enable/Disable timer limitation
Timer mode	Work Time: time limitation on daily bases, no calendar limitation Full Time constraint: absolute time limitation time + calendar limitation
Start Time	Start time of PIN code validity (hours + minutes)
End Time	End time of PIN code validity (hours + minutes)
Start date	Start day of PIN code validity (only valid for Full Time Constraint option)
End date	End day of PIN code validity (only valid for Full Time Constraint option)
Selected days	PIN code validity selection for day of a week
Outputs	Selection of the output for PIN code to trigger
Sources	Allowed input source for PIN code
Notify	When PIN code is used, administrator numbers will be notified
Latch	This selection forces output into latching mode of operation

Table 1: WEB Server-PIN entry parameters.

8.5 CALLER ID ACCESS

Caller ID access is a very simple way to control relay output defined in **Caller ID output** setting.

User will by calling in the WIGI unit trigger defined output.

Settings for this function are found in the **Caller id #** tab.

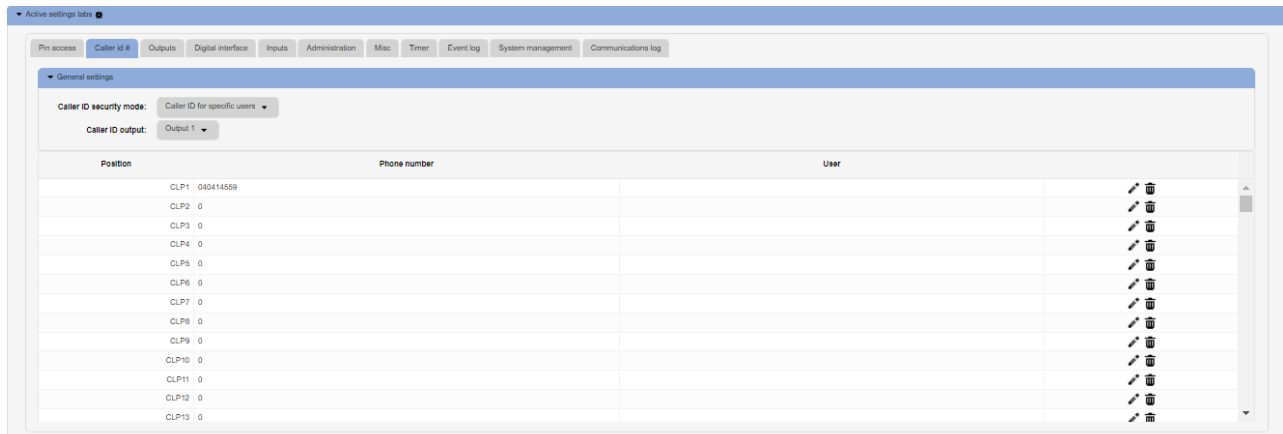


Figure 7: WEB Server-Caller ID Access

General settings:

- **Caller ID security mode:** Selecting *Caller ID Disabled* deactivates caller ID function – all numbers are restricted. Selecting *Caller ID for specific users* will limit the caller ID function only to the numbers on the list. Selecting *Caller ID always ON* will allow all user that know the number of the unit to open defined output. In last option the user doesn't need to be on the list to trigger the output
- **Caller ID output:** Selecting the output that will be triggered in Caller ID function.
-
- **Phone number:** Number of the user that will be used to open the relay selected by Caller ID output.
- **User:** Name of the user.
-

NOTE

Selection *Caller ID always ON* will allow anybody with the knowledge of the unit number to trigger the output by calling the unit. Use this setting with caution.

8.6 OUTPUTS SETTINGS

The behavior on the outputs is defined in the **Output tab**.

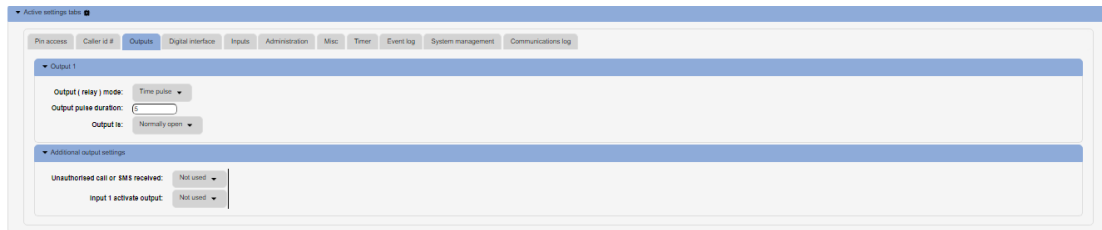


Figure 8: WEB Server-Output setting

Output 1 - Settings for output 1:

- **Output (relay) mode:** User can select between 3 options
Disable-Output is disabled.
Latching-Output is in latching mode. First Caller ID or PIN entry will activate the output, second Caller ID or PIN entry will deactivate the output.
Time Pulse-Output is time pulse mode. After output is triggered it will be activated for the time defined in **Output pulse duration**, after that time output will be restored.
- **Output pulse duration:** ON time for output in case of output mode *Timer pulse*.
- **Output is:** Output can work in normal or inverted (normally close) mode.
Normally open-In idle mode output pins are in open position.
Normally closed-In idle mode output connection is closed.

Additional output settings - Setting are used to link onboard actions with the outputs if needed:

- **Unauthorized call or SMS received:** If unauthorized call or SMS is received on the unit this event will activate output defined under this section.
- **Input 1 activate output:** If input 1 is active this action will activate output defined under this section.

NOTE

Do to limitation of the outputs use additional outputs settings with care.

8.7 TIMER-TIMED CONTROLLED OUTPUT

WIGI unit features 2 timers that can be used to control the output on the unit. Timers can run in day or week mode depending on the selected setting.

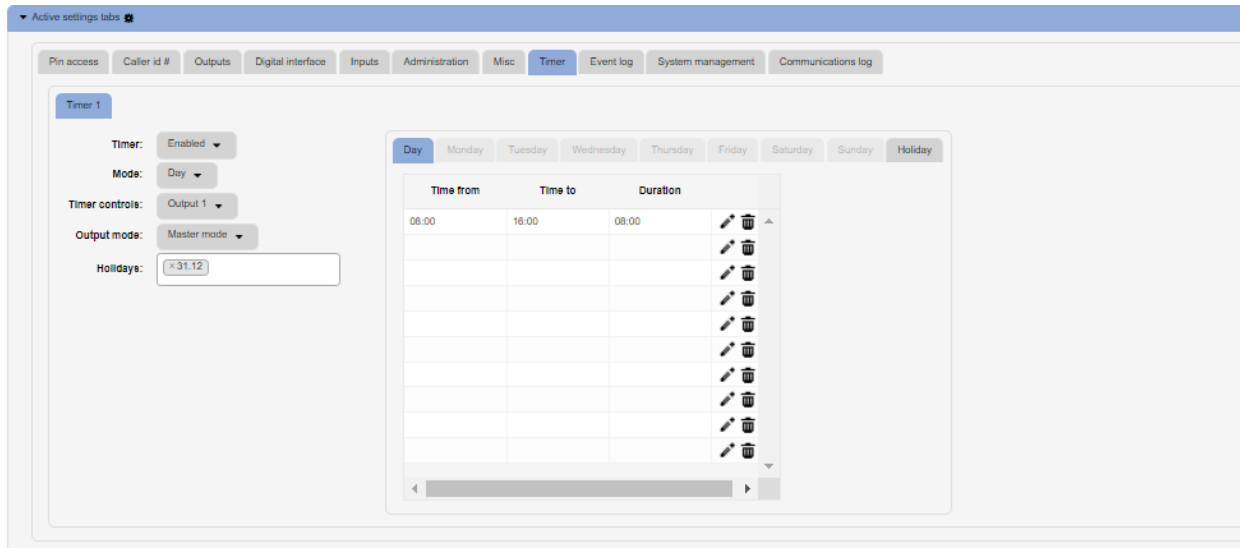


Figure 9: WEB Server-Timer setting →Day mode.

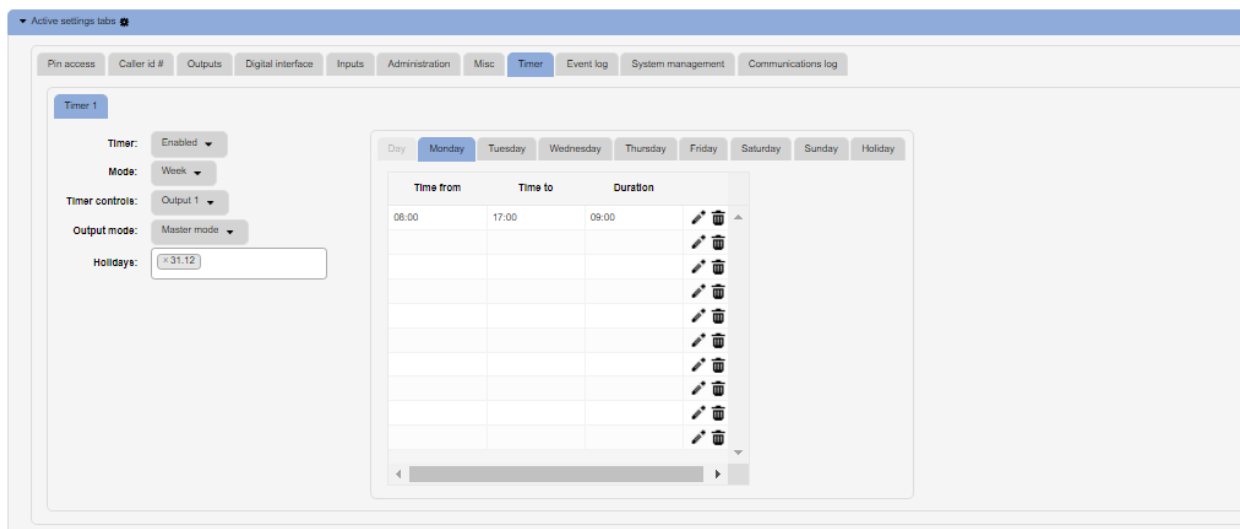


Figure 10: WEB Server-Timer setting →Week mode.

Timer settings:

- **Timer:** Parameter is used to enable and disable the timer function.
- **Mode:** User can select between day or week mode. In day mode the timer will control on the day table which is the same for all week. In week mode the user can define different setting for each day in the week.
- **Timer controls:** Output controlled by the timer function.
- **Output mode:** Output mode management definition.

OUTPUT mode options	Description
Slave mode	The behavior of the outputs (Time pulse or Latching mode) is defined in the Output tab.
Master mode:	When the output is driven by the timer (output is activated by the timer) the outputs are in latching mode regardless of the setting in Output tab. When the output is not activated by the timer, the outputs are working by the defined settings in Output tab.
Output precondition	In this mode Timer is used as PRECONDITION for output control used by other functions like PIN access or Called ID #.

Table 2: WEB Server-Timer setting, output mode options

- **Holidays:** With the definition of the holiday days (use day picker), user can define special behavior on the holiday days.

8.8 ADMINISTRATION

Administration tab allows user to enable advanced settings: notification of unauthorized access, periodic test messages, lock down of the unit...

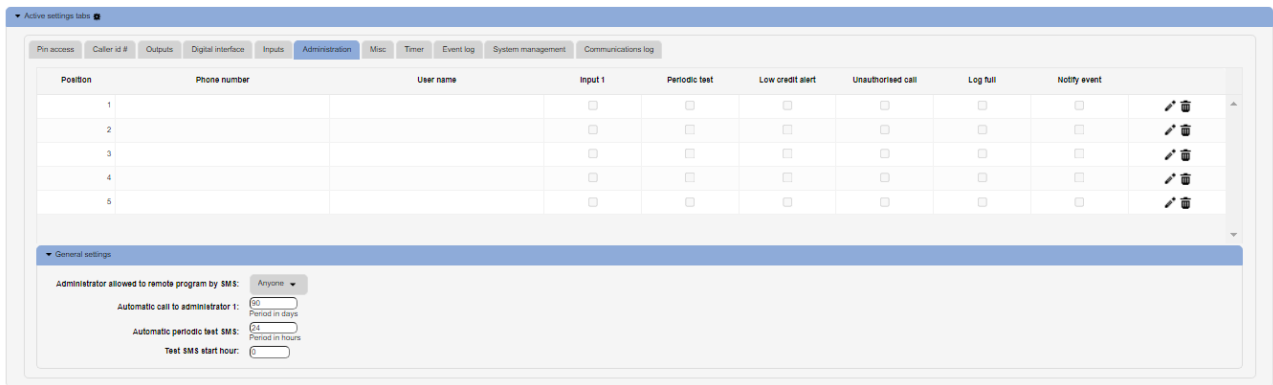


Figure 11: WEB Server-Notification numbers

- **Phone number, User name:** Phone number and user name of the user that will be receiving notification messages.
- **Input1:** If on input line 1 alarm condition is met, users with check boxes will receive alarm notification SMS.

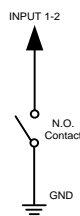



Figure 12: WEB Server-Input alarm configuration

- **Periodic test:** User can receive periodic (keep-alive) SMS, tick the check box for the appropriate user. Timer period is defined under parameter **Automatic periodic test SMS**, it is definable in hours.
- **Low credit alert:** In case of prepaid SIM card the unit can notify the user if the credit on the SIM card is low. To enable notification SMS tick the check box in corresponding position. Note that additional input in the **Misc** tab is needed to fully enable credit checking function.
- **Unauthorized call:** In case of unauthorized call the unit can notify user. To enable notification SMS tick the check box in corresponding position.

- **Administration allowed to remote program by SMS:** By selection this option the user can “Lock down” the WIGI unit, preventing any unauthorized user to change any configuration on the unit.
- **Automatic call to administrator 1:** To prevent SIM card provider to lock out the SIM card from the network, user can define a periodic call out to telephone number under position 1. Parameter is defined in days (It is not mandatory to set this parameter).

8.9 EVENT LOGGING

WIGI unit itself supports 20000 log event entries. These log events can be pull up to the server by clicking **Read Log** button in the “Event Log” tab. Events are listed in the table.

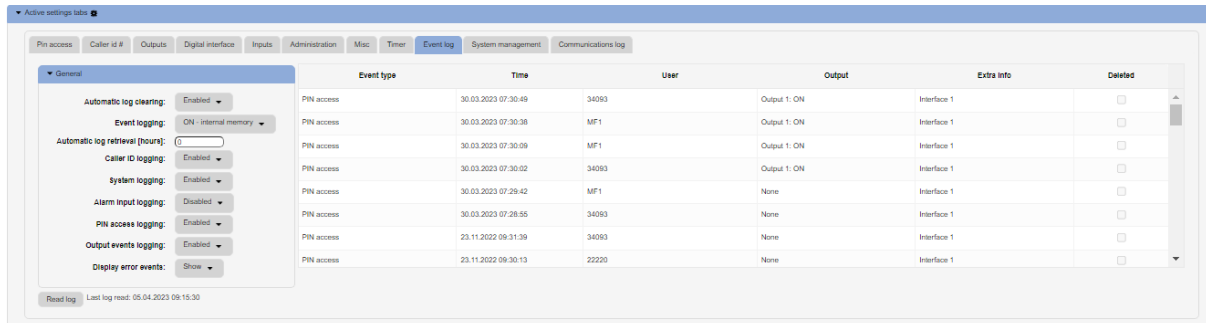

Event type	Time	User	Output	Extra info	Deleted
PIN access	30.03.2023 07:30:49	34093	Output 1: ON	Interface 1	<input type="checkbox"/>
PIN access	30.03.2023 07:30:38	MF1	Output 1: ON	Interface 1	<input type="checkbox"/>
PIN access	30.03.2023 07:30:09	MF1	Output 1: ON	Interface 1	<input type="checkbox"/>
PIN access	30.03.2023 07:30:02	34093	Output 1: ON	Interface 1	<input type="checkbox"/>
PIN access	30.03.2023 07:29:42	MF1	None	Interface 1	<input type="checkbox"/>
PIN access	30.03.2023 07:28:55	34093	None	Interface 1	<input type="checkbox"/>
PIN access	23.11.2022 09:31:39	34093	None	Interface 1	<input type="checkbox"/>
PIN access	23.11.2022 09:30:13	22220	None	Interface 1	<input type="checkbox"/>

Figure 13: WEB Server-Log event

Each event is equipped with the event type, time, output if triggered and the user name of the user responsible for the event.

If user names are available (Called ID #, PIN codes ...) user name will be shown in the user column.

NOTE

After events are read and stored to the server, the local copy on the unit gets deleted.

8.10 MISCELLANEOUS

This tab is split into 2 sections.

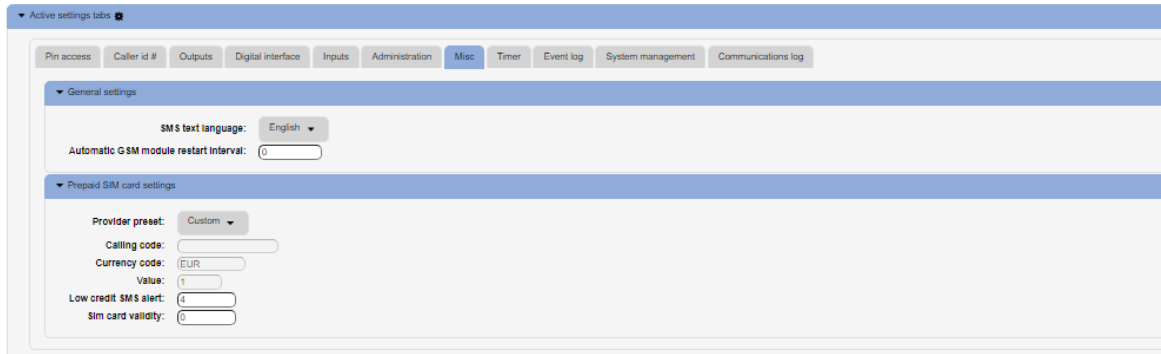


Figure 14: WEB Server-Misc

General settings can be found:

- **SMS text Language:** define the language of the SMS information send out. User can select appropriate language in drop-down menu.
- **Automatic GSM module restart interval:** User can select GSM module restart interval (hours) if needed (Not advisable to use this parameter if not advised otherwise).
- **Self-updating clock:** Parameter is used to allow unit to synchronize to real time. To have the correct time along in log event it is advisable to enable this function.

Prepaid SIM card setting is used the enable credit checking/parsing in case if prepaid SIM card is used. User can select the proper setting by selecting used SIM card provider in the drop down menu in **Provider preset**.

9 WIEGAND INTERFACE DATA FORMATS

WIGI unit support standard Wiegand interface, it will work with Wiegand 26bit and Wiegand 30bit protocol and others.

9.1 WIEGAND 26 BIT, DIFFERENT DATA FORMATS

Possible data format:

Mode 0: All 24bit of data are used a decimal representation, no option for facility code

P	B	B	B	B	B	B	B	B	B	B	B	B	B	B	B	B	B	B	B	B	B	B	B	P
Parity	24Bit card number																						Parity	

	Limits
Card Number	0 - 16777215
Facility Number	None

Table 3: Wiegand 26: Mode 0.

Mode 1: 24bit of data is divided between facility code 8 bits and 16bits for card number

P	F	F	F	F	F	F	F	F	B	B	B	B	B	B	B	B	B	B	B	B	B	B	B	P
Parity	8Bit card facility number								16Bit card number														Parity	

	Limits
Card Number	0 - 16777215
Facility Number	NOT USED

Table 4: Wiegand 26: Mode 1.

Mode 2: 24bit of data is divided between facility code 8 bits and 16bits for card number

P	F	F	F	F	F	F	F	F	B	B	B	B	B	B	B	B	B	B	B	B	B	B	B	P
Parity	8Bit card facility number								16Bit card number														Parity	

	Limits
Card Number	0 - 16777215
Facility Number	0 - 255

Table 5: Wiegand 26: Mode 2.

Mode 3: Sections of 4bit data are used as decimals values for number

P	B	B	B	B	B	B	B	B	B	B	B	B	B	B	B	B	B	B	B	B	B	B	B	P	
Parity	Dec. 6				Dec. 5				Dec. 4				Dec. 3				Dec. 2				Dec. 1				Parity

	Limits
Card Number	0 - 99999
Facility Number	None

Table 6: Wiegand 26: Mode 3.

9.2 WIEGAND 30 BIT, DIFFERENT DATA FORMATS

Possible data format:

Mode 0: All 30bit of data are used a decimal representation, no option for facility code

P	B	B	B	B	B	B	B	B	B	B	B	B	B	B	B	B	B	B	B	B	B	B	B	B	B	B	B	B	B	B	B	B	P
Parity	28Bit card number																												Parity				

	Limits
Card Number	0 - 268435455
Facility Number	None

Table 7: Wiegand 30: Mode 0.

Mode 1: 30bit of data is divided between facility code 8 bits, 16bits for card number and 4bits of unused data.

P	0	0	0	0	F	F	F	F	F	F	F	F	F	F	F	F	F	F	F	F	F	F	F	F	F	F	F	F	F	F	F	F	P
Parity	Not used				8Bit facility number								16Bit card number																Parity				

	Limits
Card Number	0 - 16777215
Facility Number	NOT USED

Table 8: Wiegand 30: Mode 1.

Mode 2: 28bit of data is divided between facility code 8 bits, 16bits for card number and 4bits of unused data.

P	0	0	0	0	F	F	F	F	F	F	F	F	F	F	F	F	F	F	F	F	F	F	F	F	F	F	F	F	F	F	F	F	P
Parity	Not used				8Bit facility number								16Bit card number																Parity				

	Limits
Card Number	0 - 16777215
Facility Number	0 - 255

Table 9: Wiegand 30: Mode 2.

Mode 3: Sections of 4bit data are used as decimals values for number

P	0	0	0	0	B	B	B	B	B	B	B	B	B	B	B	B	B	B	B	B	B	B	B	B	B	B	B	B	B	B	B	B	B	B	B	B	P
Parity	Not Used				Dec. 6				Dec. 5				Dec. 4				Dec. 3				Dec. 2				Dec. 1				Parity								

	Limits
Card Number	0 - 99999
Facility Number	None

Table 10: Wiegand 30: Mode 3.

10 CONTACTS

ONTICO d.o.o.

TEL: 00 386 40 857 338

E-MAIL: info@ontico.eu

WEB SITE: www.ontico.eu

TEHNICAL SUPPORT

Email: info@ontico.eu

SALES

Email: sales@ontico.eu